








# INSTRUCTION FOR REPLACING BOESSENTIAL TAP

## Dismantling:

|   |  |   |
|---|--|---|
| 1 | Place the piece upright for easier disassembly.  |   |
| 2 | Use your fingers to grasp the hook/pin on one side and the other for the rotating part (Open/Close) and push the tap out of the groove with a small force. |  |

## Installation of the tap:

|   |   |  |
|---|---|--|
| 1 | If not already, <b>apply the grease</b> (can use butter) around the entire perimeter of the seal. |  |
|---|---|--|

|   |  |  |
|---|--|--|
| 2 | <p>Insert the greased tap into the groove/container. The latch/pin must face upwards.</p>  |    |
| 3 | <p>Use a screwdriver to slightly raise the catch/pin and push it through the slot.</p>   |    |
| 4 | <p>Push the tap into the final position.</p>   |   |
| 5 | <p>Turn the rotating part (open/close) downwards so that the tap closes nicely and rests on the container. <b><u>Final position.</u></b></p> |  |